

How to write the SN of the product

Version 1.0

Oct - 22

Table of Contents

Copyright.....	3
Service Information.....	3
Revision History.....	3
Overview.....	4
Operation.....	4

Copyright

GENERALSCAN reserves the right to make changes to any product to improve reliability, function, or design.

GENERALSCAN does not assume any product liability arising out of, or in connection with, the application or use of any product, circuit, or application described herein.

Service Information

If there is a question with the barcode scanner, you can visit website for the live chat at: www.generalscan.com

Revision History


Version	Date	Description
1.0	Oct-22	Initial Release

Overview

This document is used to explain how to write the SN of the product.

Operation

Step 1: Scan “Default Factory Setting”, after scanning, the blue indicator light will be in quickly flashing status.

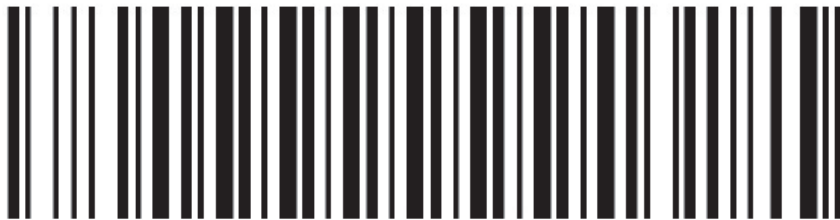

Default Factory Setting

Step 2: Scan the following barcode and prepare to write SN.




{G2115}

Step 3: Create SN barcode and use scanner to scan barcode for input.



Please find SN in the upper shell label of the scanner.

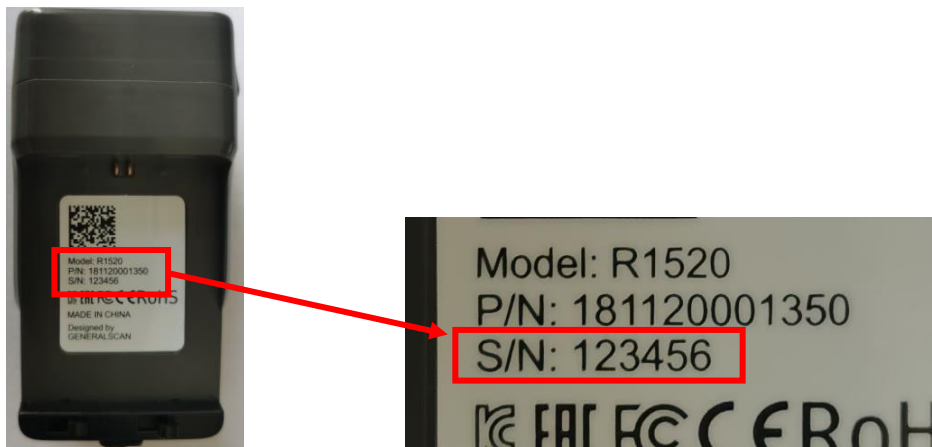

Please use the following URL to generate barcode.

[Barcode Generator | Create Your Barcodes \(generalscan.net\)](https://generalscan.net)



The screenshot shows the barcode generator interface with the following elements and annotations:

- Step 1:** Select the barcode type you want to generate. The "Code 128" radio button is selected in the "Type" field.
- Step 2:** Enter barcode. The number "123456" is entered in the "Content" field.
- Location of barcode:** An arrow points to the generated barcode image.
- Step 3:** Generate barcode. An arrow points to the "Generate" button.
- Download:** An arrow points to the "Download" button, with the instruction: "If you want to save the barcode, please click Download".